




**ARGUS MACHINE CO. LTD.**  
 5820 – 97 Street  
 Edmonton, Alberta, T6E 3J1  
 Ph: (780) 434 – 9451  
 Fax: (780) 434 – 9909  
[www.argusmachine.com](http://www.argusmachine.com)

Technical Bulletin:	TB-ML-005
Revision:	0
ECN:	---
Effective Date:	February 7, 2006
Prepared By:	J. Weiss
Approved By:	B. Bruchal

## Operation of Argus Multi-Pig Launcher (w/ Argus Pigs) Electrically Operated c/w Controller

**Warning: Failure To Follow These Instructions May Result In Serious Injury Or Fatality.**

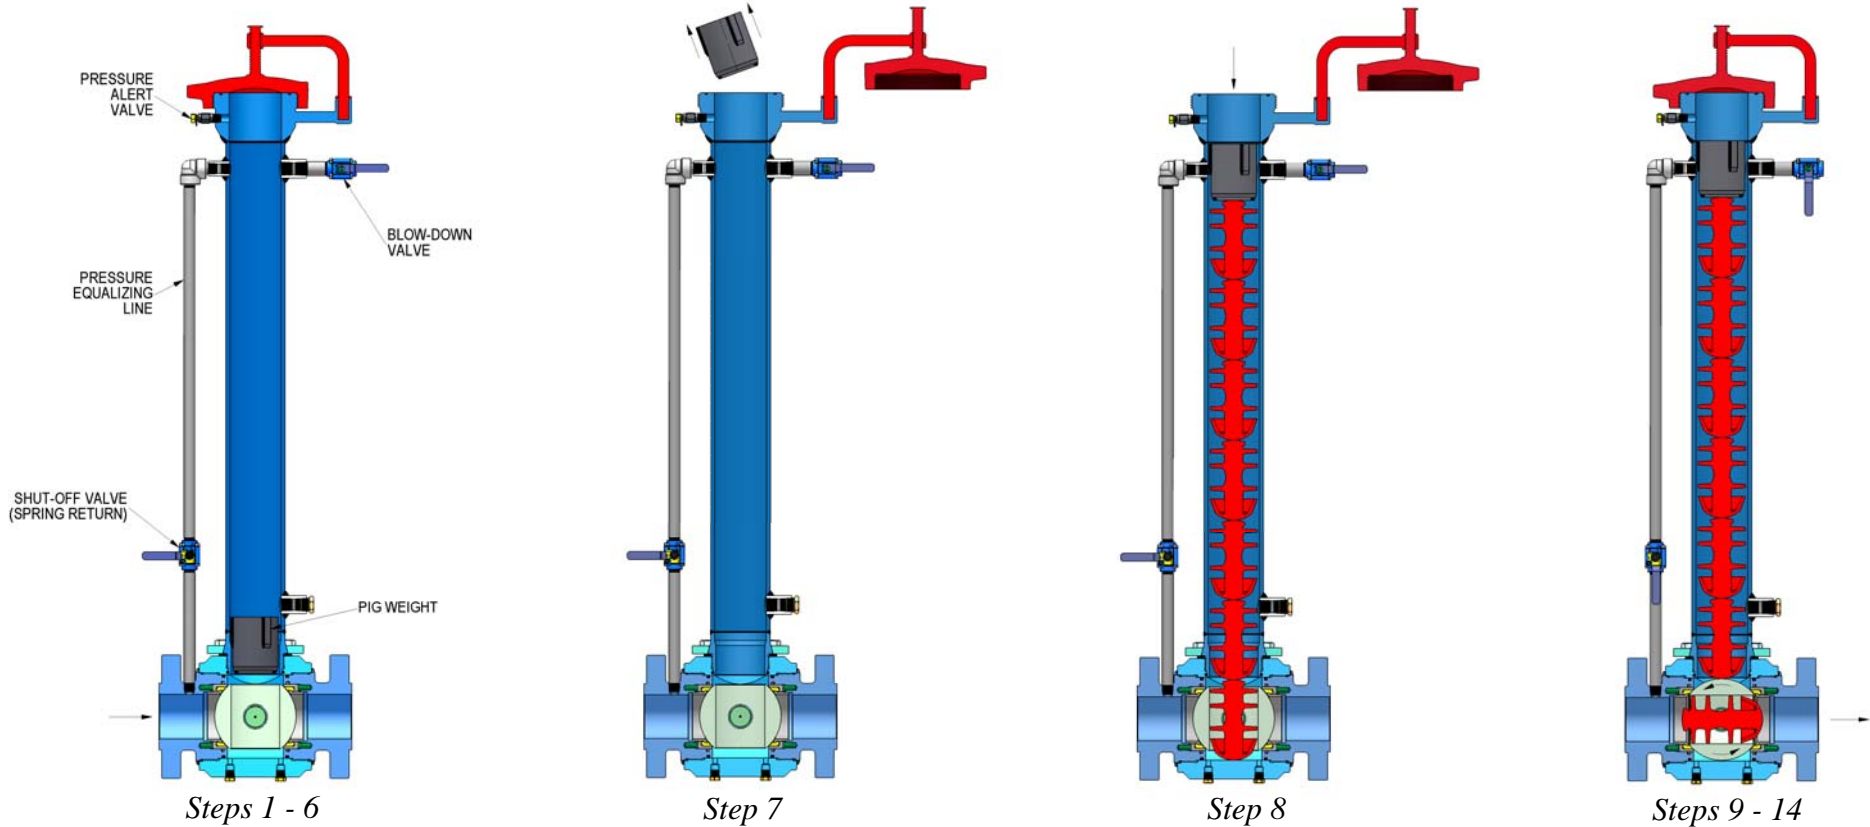

**Step 1:** Switch Actuator Selector to ‘Local’ position and locally close Actuator/Pig Valve using Actuator Dial/Button

**Step 2:** Switch Actuator Selector to ‘Stop’ or ‘Off’ position and lock-out the Selector, preventing accidental operation of Valve

**Step 3:** Ensure Shut-Off Valve is in the closed position (Pressure Equalizing Line)

**Step 4:** Relieve pressure in Pig Launcher through Blow-Down Valve

**Step 5:** Open Drain Valve (if equipped)

**Step 6:** Open Pressure Alert Valve (verify system has been effectively bled-down)

**Step 7:** Open Closure & remove Pig Weight using the supplied Pig Weight Retriever

**Step 8:** Install Argus Pigs nose down & re-install Pig Weight as indicated

**Step 9:** Re-install Cap on Closure & Pressure Alert Valve

**Step 10:** Close Blow-Down & Drain Valves

**Step 11:** Hold-open the Shut-Off Valve on the Pressure Equalizing Line until Pig

Launcher Chamber is fully energized

**Step 12:** Check Closure, Pressure Alert Valve, & Blow-Down Valve for leakage

**Step 13:** Switch Actuator Selector to ‘Local’ position and locally open Actuator/Pig Valve using Actuator Dial/Button, launching 1<sup>st</sup> Pig

**Step 14:** Switch Actuator Selector to ‘Remote’ position and lock-out the Selector

**Specifications Are Subject to Change Without Prior Notice.**