

Pressure Switch Wiring Harness Wiring Instructions

The information on this document is strictly confidential and may not be reproduced in any way without prior written permission of Argus
 PRINTED COPIES ARE UNCONTROLLED

1.0 PURPOSE

To define the instructions for connecting a Wiring Harness to a Pressure Switch.

2.0 INSTRUCTIONS

- 2.1 The installer shall be responsible for ensuring that after installation, the sealing fitting (Wiring Harness) and switch housing (Pressure Switch) connection (1/2"-14 NPT) is tight and leakproof.
- 2.2 If you experience any problems when installing the Pressure Switch or Wiring Harness please contact Argus or your local representative.

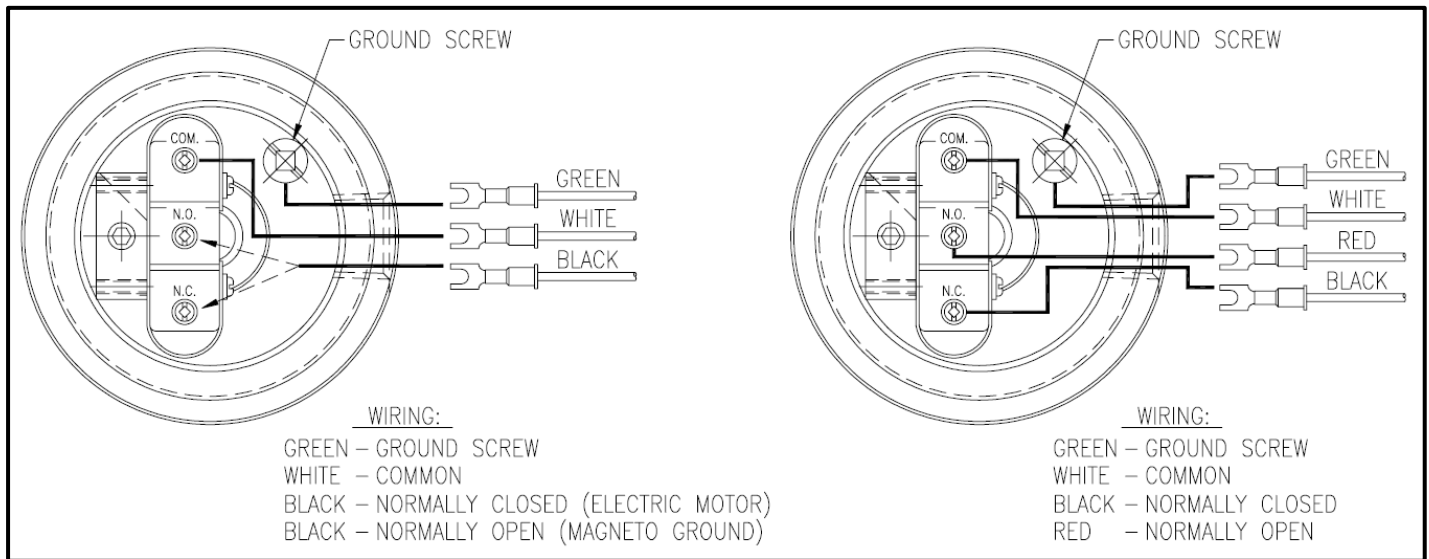


Figure 1: Three- and Four-Wire Automatic Reset

Specifications are Subject to Change Without Prior Notice – All Dimensions: inch [mm]

Created By: Rick Chetram

Created Date: 27 May 2003

Approved By:


Approved Date:

ECN No.: 02701

Page: 1 of 2

Pressure Switch Wiring Harness Wiring Instructions

The information on this document is strictly confidential and may not be reproduced in any way without prior written permission of Argus
PRINTED COPIES ARE UNCONTROLLED

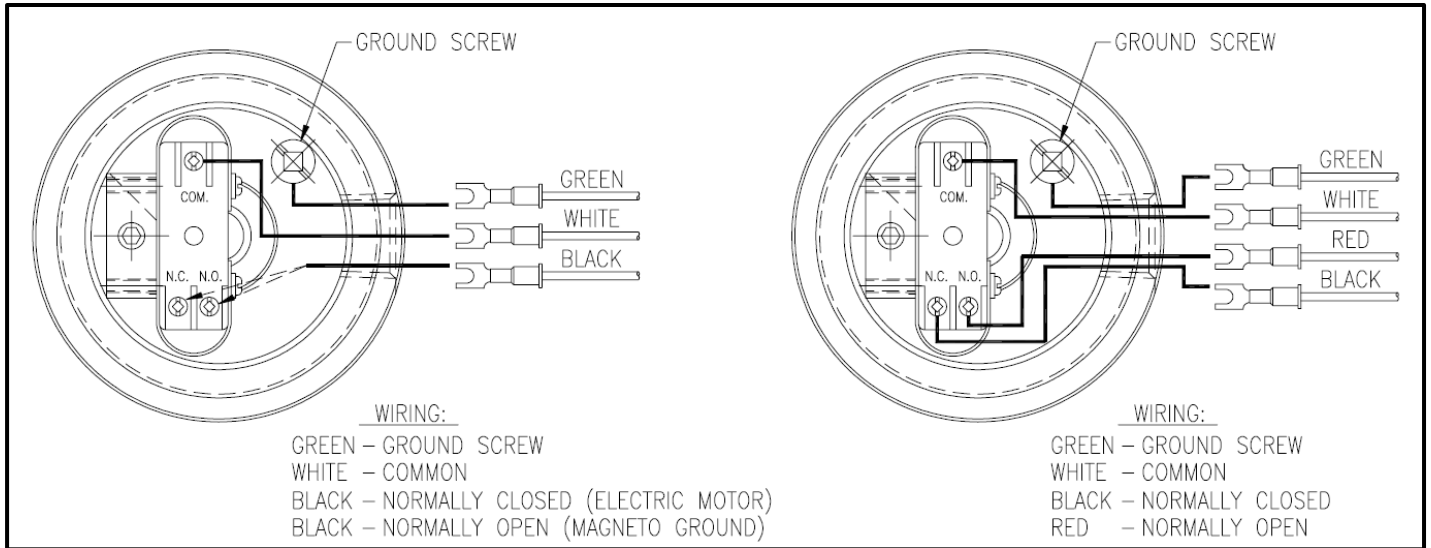

Notes:

Manual Pressure Switch cap assemblies cannot be substituted for Automatic Pressure Switch caps (internal microswitches are different between models).



Certified for Class I, Group D, Hazardous Locations (Division 1 and 2)